





# TABLE

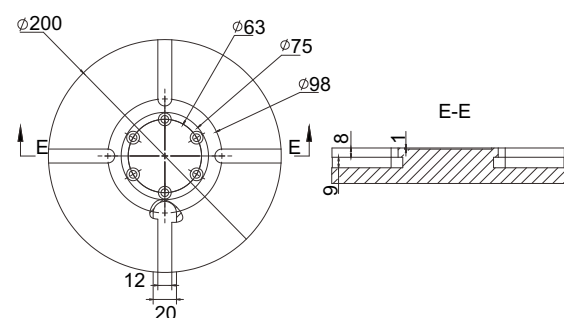


### CBS200




### CBS300

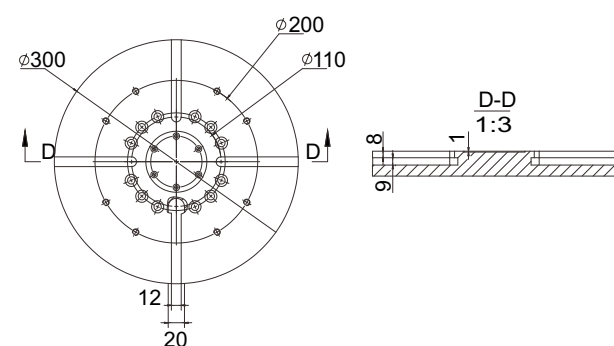

### CBS800

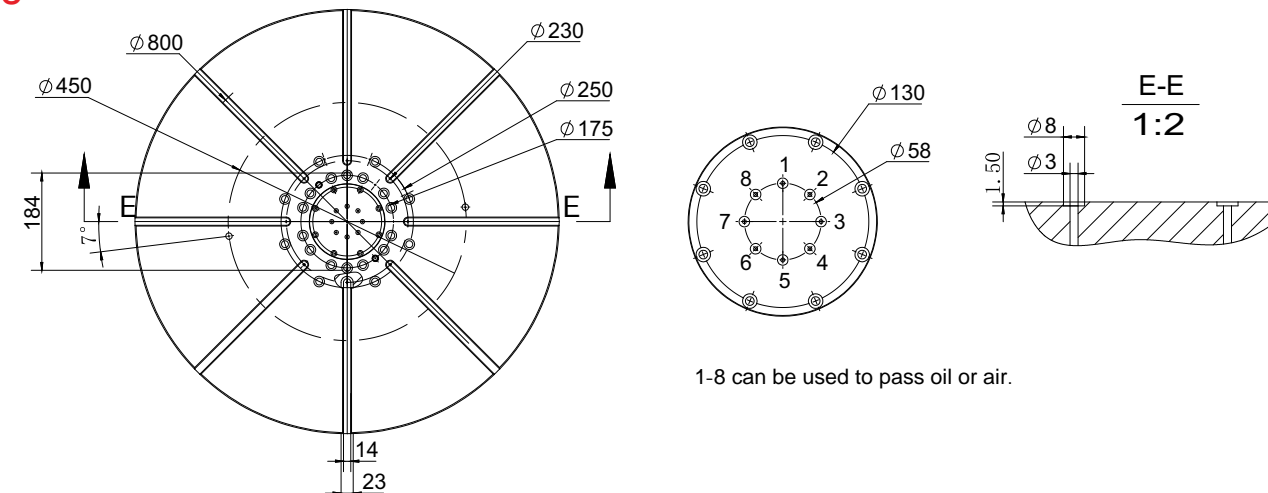


### CBS400

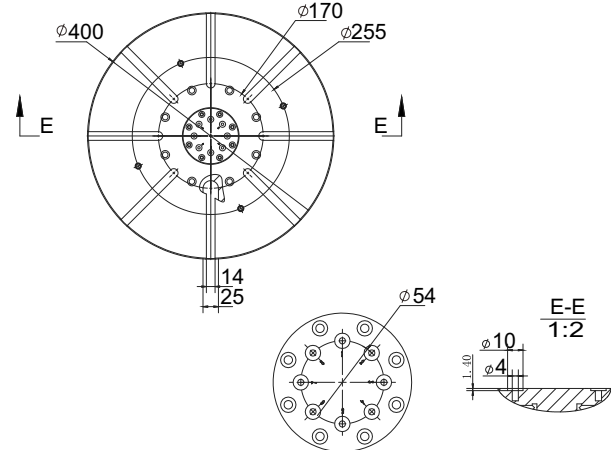


1 is for air tightness testing, 2 is for cylinder shrinkage.  
3-4, 5-8 and 7-8 are three sets of oil circuits

### CBS500

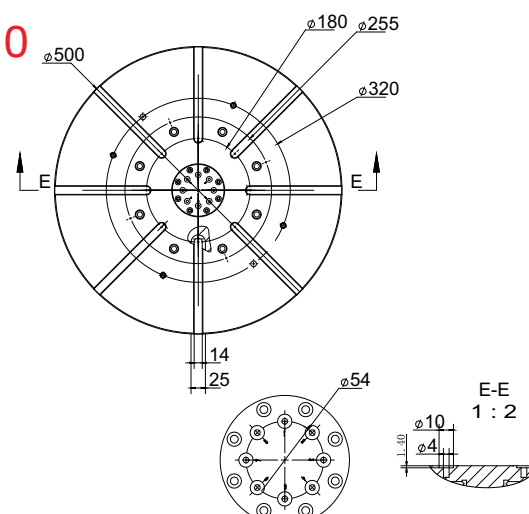


1 is for air tightness testing, 2 is for cylinder shrinkage.  
3-4, 5-8 and 7-8 are three sets of oil circuits

### CBS650(Option)

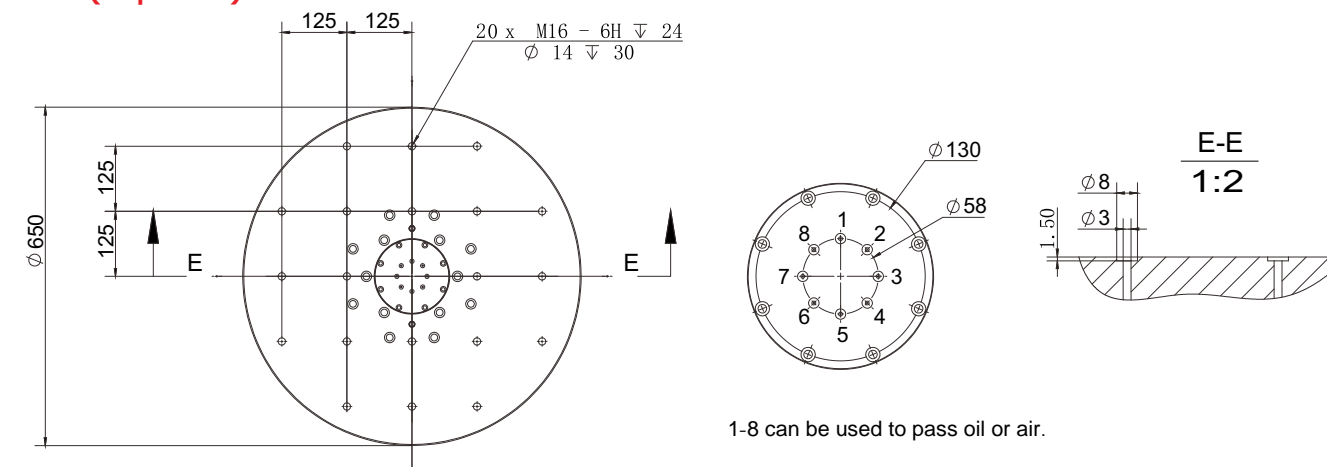

### CBS650

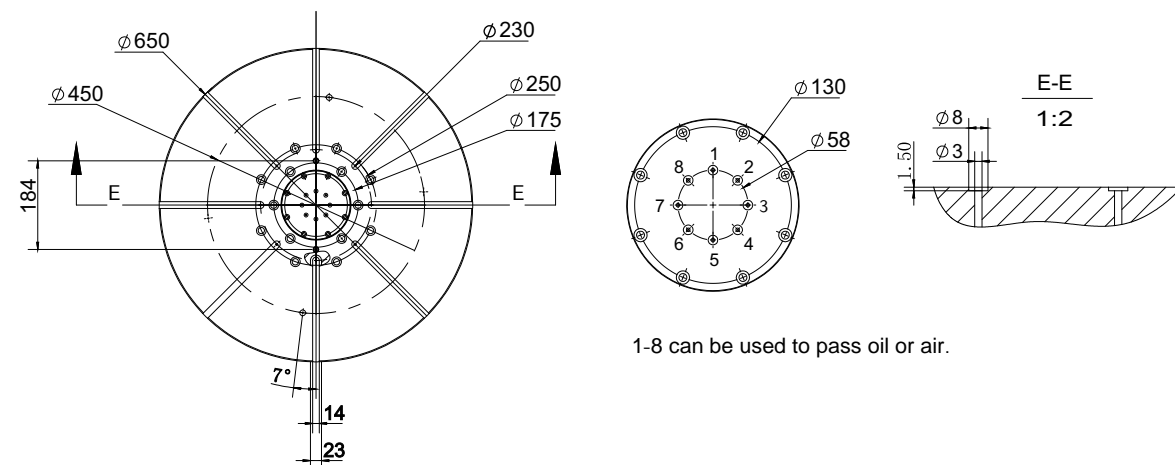

### CBS800(Option)

